

MULTI-PATTERN SPRINKLER PLUS MISTING SYSTEM

Step 1

Place the tripod in the area where you want to water. Push down on the tripod legs until the spikes are well seated in the ground.

(Follow the warning yellow sign on the tripod to avoid crimping your thumb)



Step 2

Attach your watering hose connector to the base of the tripod. Tighten the hose connector until firmly connected.

(For setup, you can choose Type A or Type B)



Step 3

Simply attach the gear driver to the top of the Tripod.



Spray Coverage and Distance Adjustment

Adjust the range tabs and angle cap to change the spray coverage (from 5° up to 360°) and spraying angle according to your need.



Spray Pattern Adjustments

Depending on your watering needs, you can manually select from the various pattern settings :

FLAT - The flat pattern will provide a flat wave of water.

FAN - The fan pattern disperses water in a wide fan shape.

MIST - This pattern is useful to cool down a small area.

LARGE - This provides a larger watering spray area.

MULTI - This is a combination of the Flat, Fan and Large patterns.



FLAT



FAN



MIST



LARGE



MULTI

Level Adjustment Indicator

Water Distribution is dispersed according to the angle position you choose. The higher position, the higher the arc; the lower position will disperse more of concentrative flow



HIGHER LEVEL (+) 0 ~ 3 :
The appearance of gradual reduction in water while providing a more dispersed pattern and further distance.



LEVEL WATER:
The flow is depend on water source.
It's the middle point between dispersed and concentrated patterns.



LOWER LEVEL (-) 0 ~ 3 :
Increase water flow while providing a more concentrated direct flow of water.

40 PSI	Large	Multi	Flat	Fan
Radius of Spray	39 ft (12 m)	37 ft (11.5 m)	29 ft (9 m)	27 ft (8.5 m)
Coverage Area up to	4860 sq ft (452 m²)	4470 sq ft (415 m²)	2730 sq ft (250 m²)	2440 sq ft (226 m²)

A simple quick adaptor (1pc) and hose connector (1pc)which incorporates a water stop feature in included with this product to simplify your watering experience. Simply connect the connector at the end of your hose, and then attach your accessories to the adaptor. You can interchange various accessories in a just a snap without any need to turn off your water tap as the adaptor will stop the water flow once you remove the accessories and no more kinking or hose twisting as the adaptor allow you to swivel your hose 360° degrees.

