

Premium Quick Connect with Shut off Valve Set (9 pcs)



Swap watering tools quickly without frustration.

Every yard has multiple watering needs. This requires switching out various watering tools from nozzles and wands to oscillating sprinklers. This seemingly simple task often becomes a source of frustration and wasted time. Trudging back to the faucet to turn off the water is a chore, and the threads on a hose can wear out and be difficult to align properly with your watering tools.

The Premium Quick Connect with Shut Off Valve Set makes switching tools easy. Simply attach the hose to the faucet as usual, then attach the Quick Connect with Shut Off Valve to the other end of the hose. Attach the Product Adapters to any watering accessory and quickly snap on to the connector. The lock feature ensures a secure fit and the flow-control valve gives you the ability to shut off the water right where you stand to easily change tools while also controlling the water pressure. Stop making trips back-and-forth to the faucet.

Features & Benefits

- Easy-to-adjust flow control switch allows you to easily shut off the water and swap tools without having to return to the faucet – saving time and water
- Rubberized grip provides comfort in handling even in wet conditions
- Disconnect your watering tools without getting wet
- Easily switch out watering tools without traveling back to the faucet
- Secure twist-and-lock feature prevents unexpected disconnection
- Works with your power pressure washer, RV, boat, camper, nozzles, etc.
- Fits all standard garden hoses

Step 1



Attach Premium Quick Connect with Shut off Valve to the hose.

Step 2



Insert the Product Adapters into various watering tools such as nozzles; wands; oscillators; sprinklers; and more.

Step 3



Easily snap the watering tools on and off whenever you need to switch tools even with the water running.

⚠ CAUTION ⚠

-When not in use, rinse the tool with water to remove most of the dirt, dry your tool, and store indoors

A close-up photograph of a hand holding a black and red spray wand. The wand has a trigger switch on the handle. A red arrow points from the 'OFF' position to the 'ON' position of the trigger switch. The background is a green, leafy bush.

Secure twist-and-lock mechanism prevents accidental disconnection

