



# Multi-Adjustable Spike Sprinkler with Extension Set

Place your multi-adjustable sprinklers throughout your garden to water just where you want it. Once the system is in place, use a programmable water timer to set a watering schedule and let your system do all the work. The system is completely modular and can grow with your needs.





## Get Started:

Attach the garden hose to the Hose Connector. Fits most standard 1/2" garden hoses (raw hose, without end fittings).

Connect the hose to your faucet or water timer

Place the sprinklers in the area you want to water

Space sprinklers 3 - 13 ft. (1 - 4m) apart for best coverage. Each sprinkler waters up to 32 ft. diameter (10m).

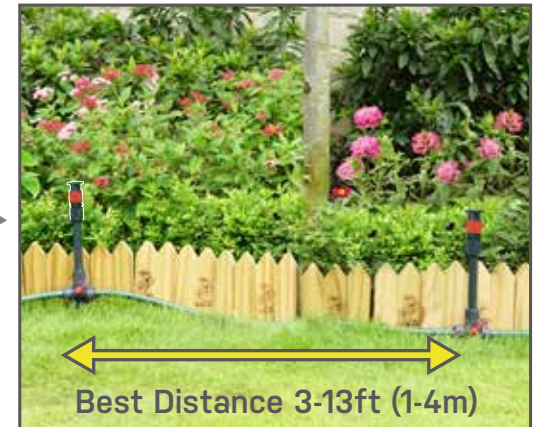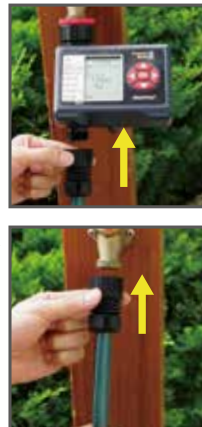


## Connect the Sprinklers:

Cut the hose to match the distance between sprinklers

Attach the hoses to the sprinkler by unscrewing the side hose connector

Insert the hose into the side hose connection then tighten the connector

Apply STOP End Cap at the end of circuit

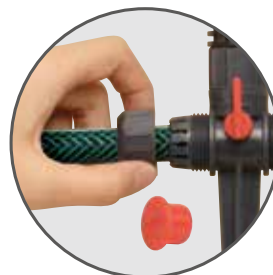

### Adjust the Spray:



Adjustable Spray Angle

**360°**



Adjustable Rotating Head

**1-360°**



Flow Control to adjust the spray distance


waters up to **32ft.(10m)**




### T-Connector Set Up:

If your faucet is in the middle of your watering area, use the T-Connector to split the water flow into two directions.

#### SETUP METHOD-1

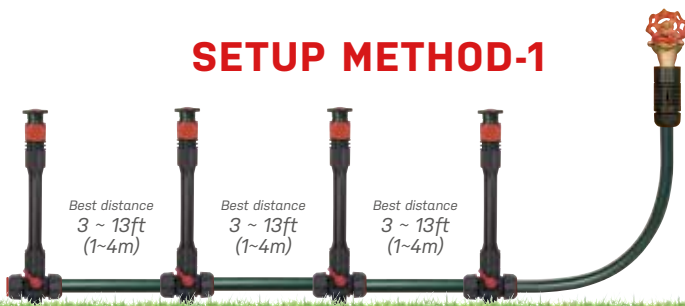

#### SETUP METHOD-2

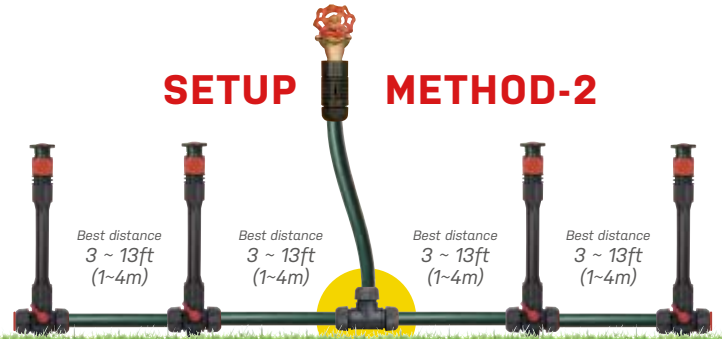

### Add Height:

Add the 5" extensions where needed to water over taller plants



### Reach further:

Use the Hose Extender/Hose Repair to extend the length of one hose or repair a broken hose.



### Turn the Water On!

