

TWO-ZONE MECHANICAL WATER TIMER



Installation:

Step 01:

Secure the timer to an outside faucet (Do not overtighten)



Step 02:

Attach the hose to the timer

Step 03:

Connect the watering tool to the hose end

Step 04:

Turn on the water

Step 05:

Set the desired watering time by rotating the knob clockwise.
Watering will begin and stop automatically after the allotted time



Manual operation:

For un-timed water flow, simply turn the knob counterclockwise to "Manual On".
To turn the water flow off, move the knob back to 0.



Cleaning Your Timer:

You should clean your timer periodically. Debris or sediments commonly found in water can build up in your timer.

Turn off the water. Remove the timer from the faucet and check that the filter washer is clear. If you notice any debris, remove the filter washer and clean it out with water.

Activate the MANUAL mode by rotating the knob to "MANUAL ON". Spray water through the valve and the faucet connection to flush out any built-up sediments or debris.

Seasonal storage:

Freezing temperatures can cause water in the timer to freeze and expand, damaging the timer.

At the end of the season or when there is frost in the forecast, turn off the water and remove your timer from the faucet.

Be sure to store the timer indoors, away from freezing temperatures.

WARNING:

Intended for outdoor use only. This is not a toy. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, drain and store indoors away from freezing temperatures.

WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.



QUESTIONS? CONCERNS?

We're here to help!

Contact our reliable, US-based Customer Service

support@edengarden.com

1+ 866-521-7718