


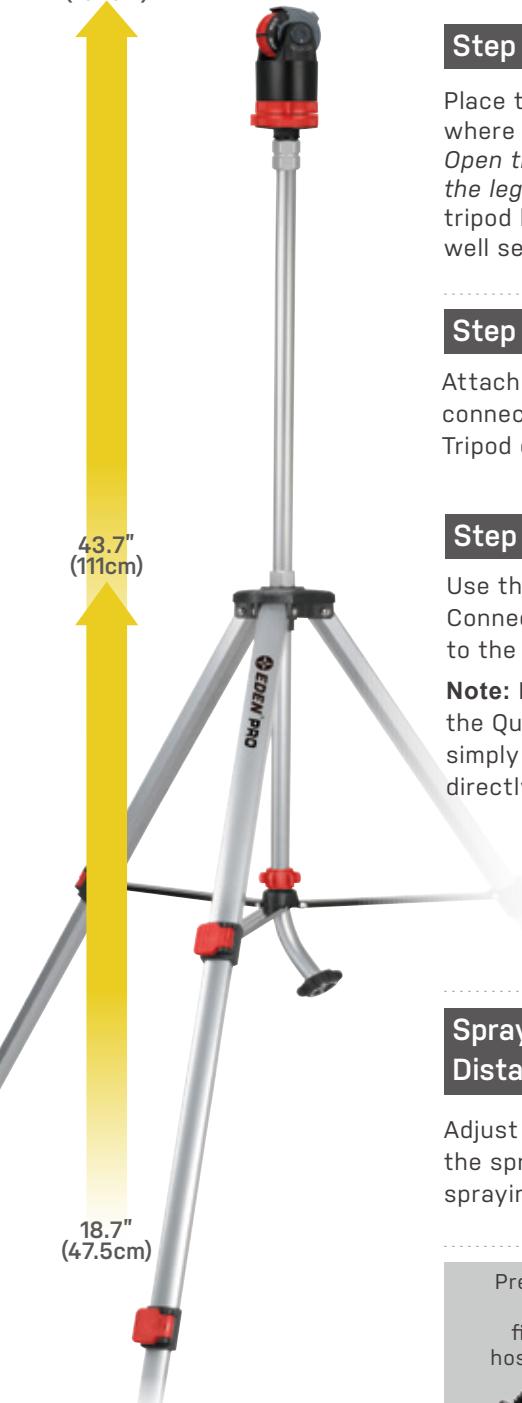


63.7"

(162cm)

**Step 1**

Place the tripod in the area where you want to water. *Open the latches to release the legs.* Push down on the tripod legs until the legs are well seated in the ground.

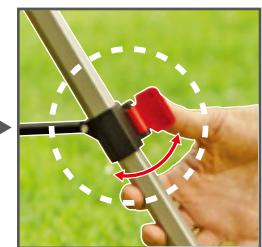**Step 2**

Attach the Extension Tube to the tripod, then connect the sprinkler head to the top of the Tripod or Extension Tube (**do not overtighten**).

**Step 3**

Use the Quick Connect to easily connect and disconnect the sprinkler from the hose. Connect the Product Adapter to the base of the sprinkler. Attach the lockable Quick Connect to the end of the hose, then simply snap in the hose to the sprinkler to begin using.

**Note:** If you are not using the Quick Connect System, simply connect the sprinkler directly to the hose.

**Spray Coverage and Distance Adjustment**

Adjust the range tabs and angle cap to change the spray coverage (from 5° up to 360°) and spraying angle to water just where you need.



Premium Quick Connect Starter Set  
fits standard garden hoses and watering tools



**Perfect for watering lawns and gardens**



Vegetables



Fruits



Lawn



Agricultural



Horticultural



Garden

## Spray Pattern Adjustments

Depending on your watering needs, you can manually select from the various pattern settings:

FLAT - The flat pattern will provide a flat wave of water.

FAN - The fan pattern disperses water in a wide fan shape.

MIST - This pattern is useful to water delicate plants. (Does not rotate)

LARGE - This provides a larger watering spray area.

MULTI - This is a combination of the Flat, Fan and Large patterns.

MINI - Provides delicate plant watering



FLAT



FAN



MIST



LARGE



MULTI



MINI

## Level Adjustment Indicator

Move the angle cap to control the distance of your watering area. The higher level will create a higher arc for greater water coverage. The lower level will reduce the watering area. Convenient indicators help you remember your settings for next time.



**HIGHER LEVEL (1-3):**  
Adjust the spray upwards for maximum distance.



**LEVEL (0)**  
Adjust the spray in between a dispersed and concentrated watering area.



**LOWER LEVEL (3-1)**  
Adjust the spray downwards to reduce the watering area.

40 PSI	Large	Multi	Flat	Fan	Mini
<b>Radius of Spray</b>	39 ft (12 m)	37 ft (11.5 m)	29 ft (9 m)	27 ft (8.5 m)	36 ft (11 m)
<b>Coverage Area up to</b>	4860 sq ft (452 m <sup>2</sup> )	4470 sq ft (415 m <sup>2</sup> )	2730 sq ft (253.6 m <sup>2</sup> )	2440 sq ft (226 m <sup>2</sup> )	4090 sq ft (380 m <sup>2</sup> )

## WARNING:

Intended for outdoor agricultural or horticultural use only. This is not a toy. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, drain and store indoors away from freezing temperatures.

**WARNING:** This product can expose you to chemicals including styrene which is known to the State of California to cause cancer. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



QUESTIONS? CONCERNS?

We're here to help!

Contact our  
reliable, US-based  
Customer Service

[support@edengarden.com](mailto:support@edengarden.com)

1+ 866-521-7718

The Quick Connect Adapter (2 pcs) and Hose Connector with Water Stop (1 pc) simplify your watering experience. Simply attach the connector at the end of your hose. Then, connect the adapters to your watering tools. Interchange various tools in a snap without turning off the water as the adapter will stop the water flow. No more kinking or hose twisting as the adapter allows the hose to swivel 360 degrees.

