

6-PATTERN ROTARY GEAR DRIVE SPRINKLER WITH TELESCOPING TRIPOD

Tripod length
63.7"
(162cm)

Range tab - adjust range and prevent water waste

6 spray patterns to meet all your watering needs
- flat, fan, large, jet, full and mini

Connects to any Eden sprinkler base with "H" shape or tripod base

Spray Angle - adjust the tabs to change the spray angle from 5° to 360°

Added filter to prevent water sediment

Perfect for watering lawns and gardens



Agricultural



Horticultural



Vegetables



Fruits



Lawn



Garden

Step 1

Place the tripod in the area where you want to water. Open the latches to release the legs. Push down on the tripod legs until the legs are well seated on the ground.



Step 2


Attach the Extension Tube to the tripod, then connect the sprinkler head to the top of the Tripod or Extension Tube (**do not overtighten**).



Step 3

Using the Quick Connect with Shut Off Valve allows you to easily shut off the water and swap tools without having to return to the faucet – saving time and water. Attach the lockable Quick Connect to the end of the hose, then snap the hose to the tripod to begin using.

Note: If you are not using the Quick Connect System, connect the sprinkler directly to the hose.

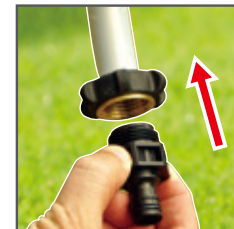







Quick Connect Starter Set with Shut Off Valve fits standard garden hoses and watering tools



43.7"
(111cm)

Filter prevents sediments and dirt from getting into sprinkler

18.7"
(47.5cm)

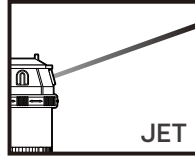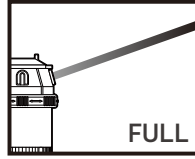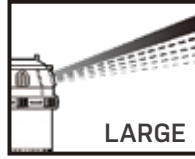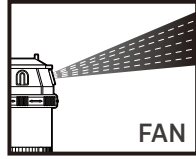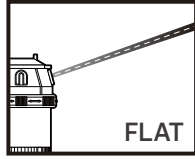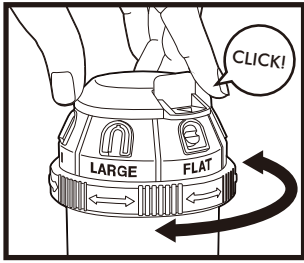

Spray Pattern Adjustments

Depending on your watering needs, you can manually select from the various pattern settings:

Flat - The flat pattern will provide a flat wave of water.


Fan - The fan pattern disperses water in a wide fan shape.

Large - This provides a larger watering spray area.

Full - This pattern provides strong distance watering.




Jet - Concentrated far distance watering.

Mini - Provides gentle spray for delicate plants.

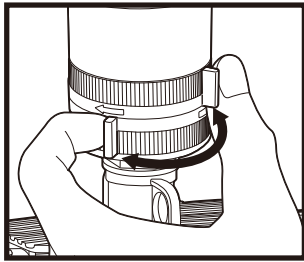

Spray Angle Adjustment

Adjust the tabs to change the spray angle to fit your needs (from 5° up to 360°).

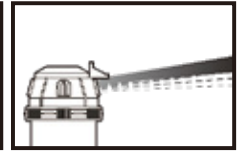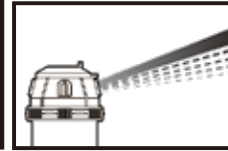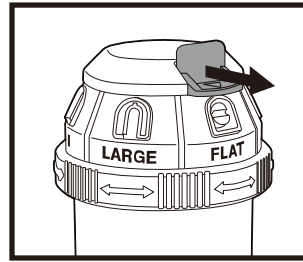

Range Tab

Move the tab in or out to control the spray distance and water where it's needed.

WARNING:

Intended for outdoor agricultural or horticultural use only. This is not a toy. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, drain and store indoors away from freezing temperatures.

WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov

The Quick Connect Adapter (2 pcs) and Hose Connector with Water Stop (1 pc) simplify your watering experience. Simply attach the connector at the end of your hose. Then, connect the adapters to your watering tools. Interchange various tools in a snap without turning off the water as the adapter will stop the water flow. No more kinking or hose twisting as the adapter allows the hose to swivel 360 degrees.



QUESTIONS? CONCERNS?

We're here to help!

Contact our
reliable, US-based
Customer Service

support@edengarden.com

1+ 866-521-7718

