


MISTING AND REVOLVING SPRINKLERS WITH TELESCOPING TRIPOD

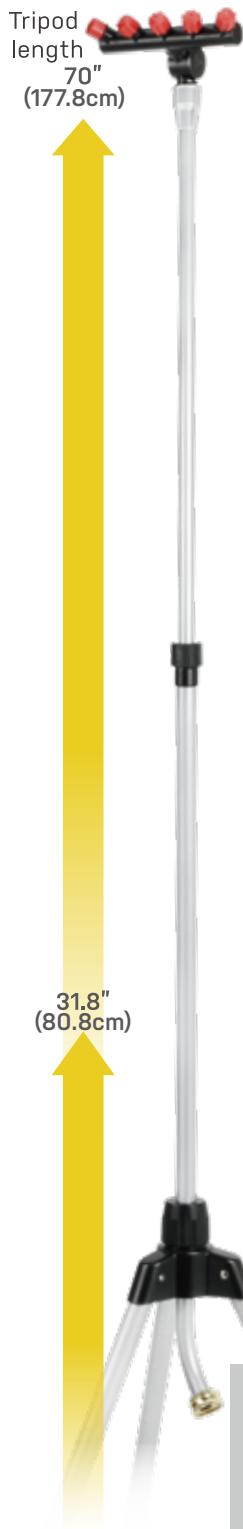

Step 1

Place the tripod in the area where you want to water. Push down on the tripod legs until the spikes are well seated in the ground.

(Follow the yellow warning sign on the tripod to avoid pinching your thumb)



Step 2

Simply attach the sprinkler head to the top of the Tripod (do not overtighten).



Step 3

Using the Quick Connect with Shut Off Valve allows you to easily shut off the water and swap tools without having to return to the faucet – saving time and water. Attach the lockable Quick Connect to the end of the hose, then snap the hose to the tripod to begin using.

Note: If you are not using the Quick Connect System, simply connect the sprinkler directly to the hose.



Features & Benefits

- Misting head features 360-degree horizontal angle adjustments, 200 degree vertical angle adjustments to water in any direction
- Easy to move and place anywhere in the yard
- No tools required to assemble! Hand tighten only
- 15 spray nozzles provide a dancing fountain watering effect
- Tripod adjusts from 31.8 inches to 70 inches (80.8 cm to 177.8 cm) for watering tall plants
- Great for cooling patios, balconies, and outdoor areas for relief during the summer heat, cooling mist refreshes hanging plants, potted plants, vases, herbs, and more

Perfect for watering lawns and gardens



Vegetables



Fruits



Lawn



Agricultural



Horticultural



Garden



Cleaning and Maintenance:

If you are not using a water filter and the Misting Tower has low water pressure, you may need to clean the misting nozzles. To clean, simply use your hand to unscrew the red nozzle caps. Carefully rinse all parts with a gentle water flow. Be mindful of all parts when cleaning. Cleaning should be done on a workbench to prevent losing parts.



Center fountain head nozzle creates fountain effect



WARNING:

Intended for outdoor agricultural or horticultural use only. This is not a toy. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, drain and store indoors away from freezing temperatures.

WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.



The Quick Connect Adapter (2 pcs) and Hose Connector with Water Stop (1 pc) simplify your watering experience. Simply attach the connector at the end of your hose. Then, connect the adapters to your watering tools. Interchange various tools in a snap without turning off the water as the adapter will stop the water flow. No more kinking or hose twisting as the adapter allows the hose to swivel 360 degrees.

